


CBG-AR36-A60 / CBG-AR42-A60

Adjustable Gate Installation Guide

Standard Width Gate


1. **Install the rails.** Insert top and bottom rails into corresponding brackets on the posts. Use 12pcs #10x1" pan head screws to secure bracket and rails on the inside of the posts, use 8pcs #10x3/4" pan head screws to secure bracket and rails on the outside of posts.

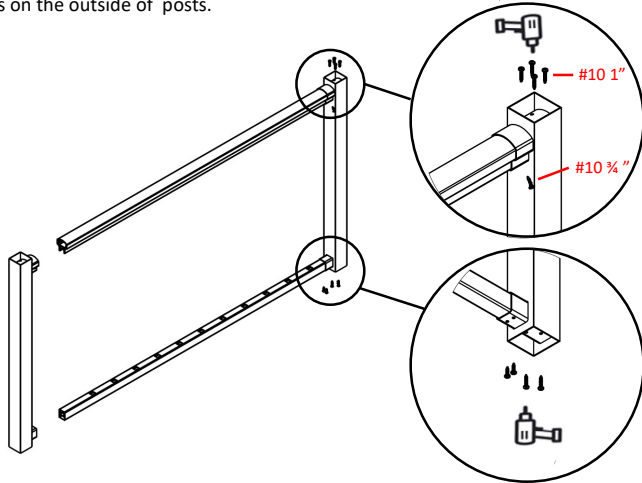


2. **Install the pickets and spacers.** Insert picket end into bottom rail and slide the opposite picket end into the top rail. Insert spacer for even pickets

Do not snap in the last 4 spacers before installing the last 4 pickets.


Insert last 4 pickets as group and adjust the pickets distance, then snap in the spacers .

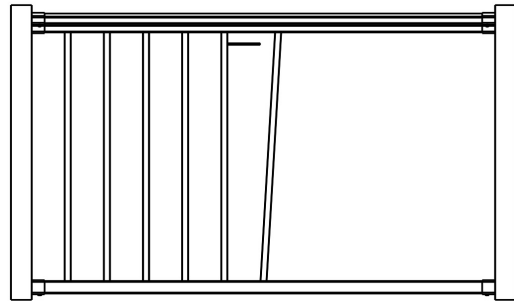

3. **Install the post caps.** Install and secure the caps with #10x3/4" pan head screws.

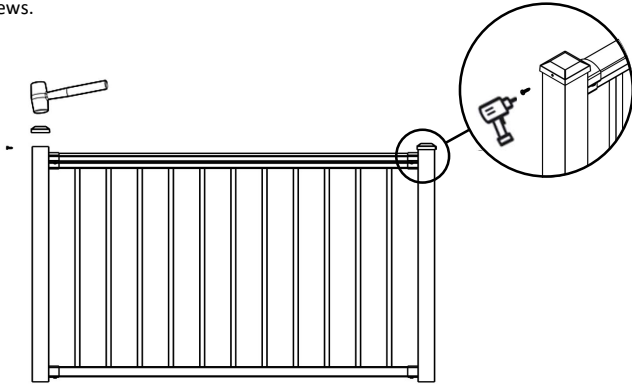

4. **Install the hinges and latch.** Ensure the distances from top of the hinge to top rail , from bottom of the hinge to bottom rail and from top of the latch to the top rail match the measurements.

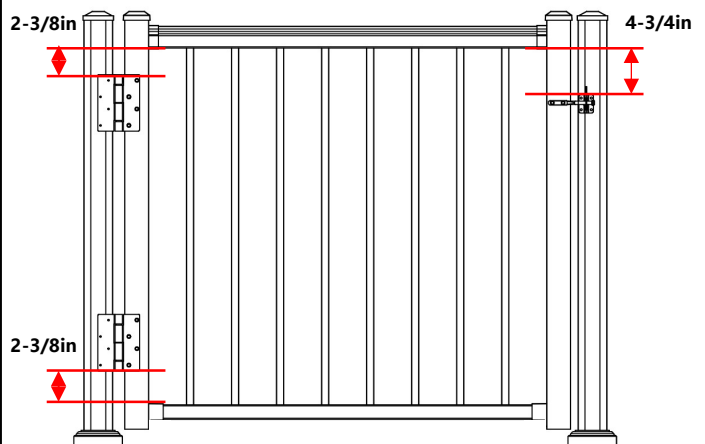

Adjust Gate Width

1. When reducing the width of the gate, the top and bottom rails must to be cut to ensure that the gap between the left and right pickets and the posts is equal and less than 4 inches

