


KEYSTONE® 1-SIDED GRAVITY LATCH INSTALLATION INSTRUCTIONS

PLEASE CAREFULLY READ ALL INSTRUCTIONS PRIOR TO
INSTALLATION.


Gate gap must be between ½" and 1-3/4"

Tools Needed:


- Tape Measure & Pencil
- Drill with a #2 Phillips Bit
- 1/8" Drill Bit

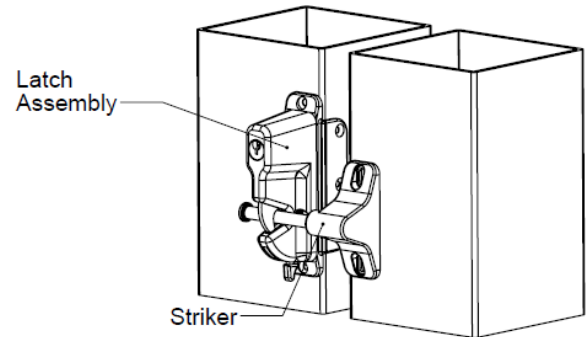

Remove
Screws

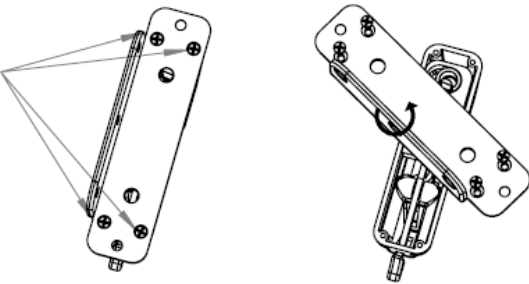


1. Determine the application of the latch. The Keystone latch comes standard for right-handed gate applications. To change the assembly for a left-handed gate, remove the 4 screws on the mounting plate and rotate. Then reinsert the four screws. **DO NOT ALLOW THE INNER COMPONENTS TO MOVE.**

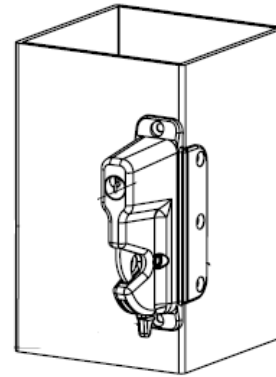

2. Place the latch assembly on the fence post at the desired mounting height. Mark the center points of the 5 mounting holes and drill pilot holes using a 1/8" drill bit. Realign the latch assembly and secure with the included five ¾" flat head screws.

3. When the latch assembly has been secured, install the striker to the gate.

- With gate closed, position the striker within the latch assembly, behind the latch mechanism
- Mark the location of the striker on the gate.
- Secure the striker to the gate with five ¾" pan head screws.
- If the striker does not line up or if the gate sags over time, the striker can be adjusted vertically to ensure proper alignment with the latch assembly.

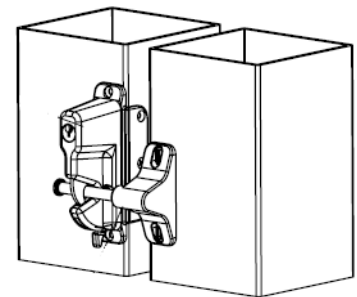

4. Test the latch to assure it locks and unlocks properly.

Lock: Turn key clockwise to stop point, then counterclockwise to 12:00 O'clock position and remove.

Unlock: Turn key counterclockwise to stop point, then turn key clockwise to 12:00 O'clock position and remove.

